


CV58F-2 真空吸風切線線屑集塵組

廢布收集組&三方位空氣/氣缸抬壓腳 FOR (UHD9000F/UHU9000)

CHAIN & WASTE REMOVAL CYLINDER FOR PRESSER FOOT ASSEMBLY

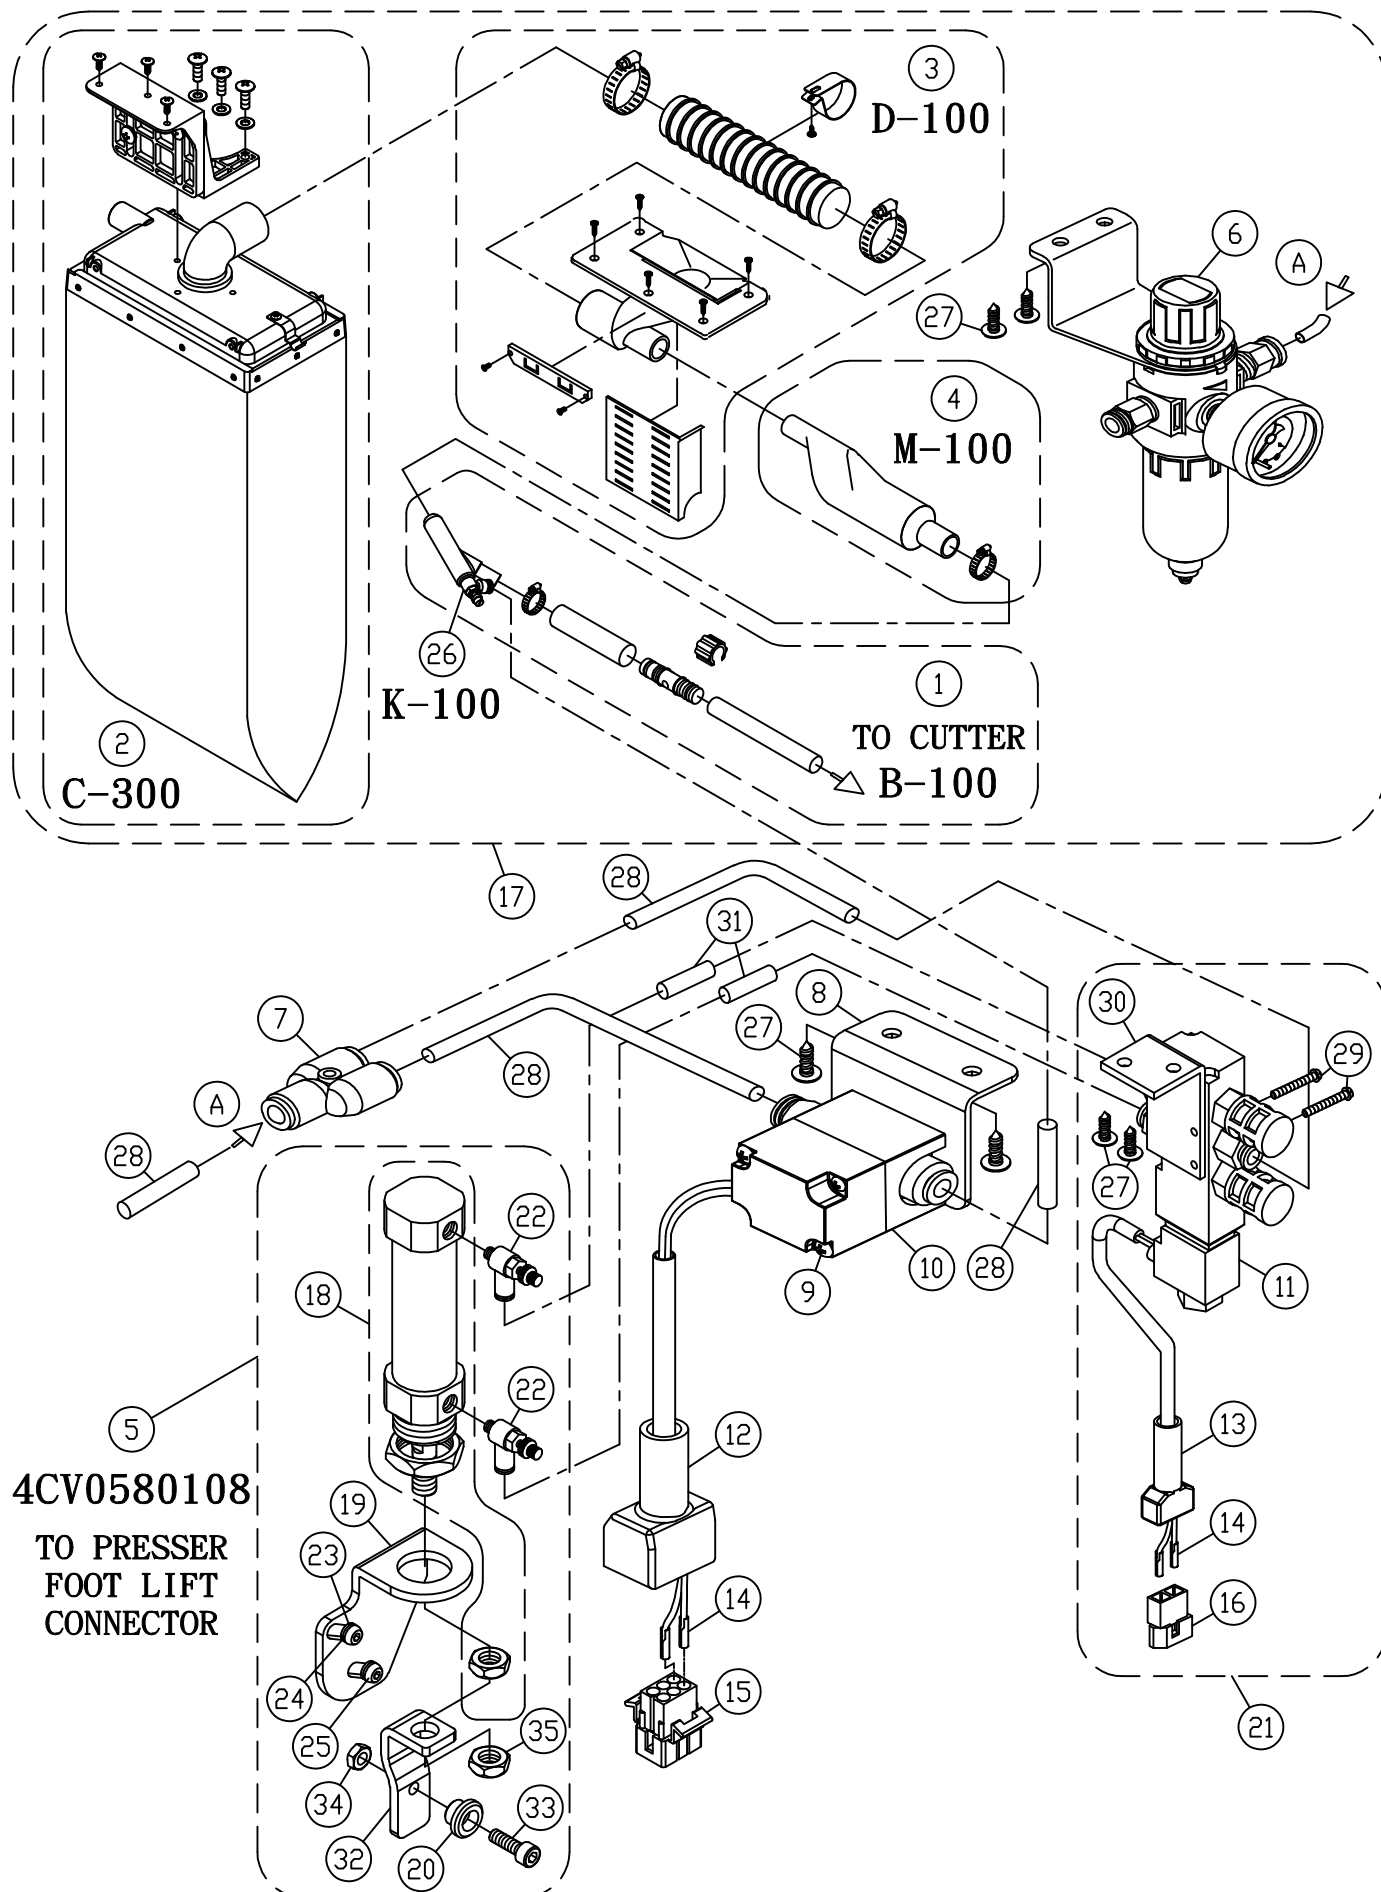

CV58F-2 真空吸風切線線屑集塵組**廢布收集組&三方位空氣/氣缸抬壓腳 FOR (UHD9000F/UHU9000)****Chain & Waste Removal Cylinder For Presser Foot Assembly**

序號 Ref. No.	物料編號 Parts.No.	名 Description	稱	單位用量 Amt. Req.
1	B-100	真空送氣組	Vacuun Chain Removal	1
2	C-300	廢布&線頭收集組(布袋)	Waste & Lint Gather System (Fabric Bag)	1
3	D-100	吸線屑&吸布屑主座	Waste & Lint Remover Funnel	1
4	M-100	消音組	Muffler	1
5	4CV0580108	抬壓腳用-氣缸組	Air Cylinder For Presser Foot Assembly	1
6	4CV0060126	調壓閥組(含公、母接頭)	Filter/Regulator	1
7	4TC012016	Y型三通接頭	Y Connector	1
8	4CV08F0101	固定座	Bracket	1
9	8MC03204506D	螺絲	Screw	2
10	4CV08F0102	電磁閥	Electrical Controller	1
11	4TC0010303	換向閥 (6mm)	Electrical Controller	1
12	4TT-S34033	連接器套頭6P	Power Cord Cap	1
13	4AL013013	連接器套頭2P	Power Cord Cap	1
14	4AL013015	2P母端子	Power Cord	4
15	4TT-S34032	6P母扣連接器	Power Cord	1
16	4AL013017	2P母扣連接器	Power Cord	1
17	CV08B-1	真空吸風切線線屑集塵組&廢布收集組 Chain & Waste Removal Assembly		1
18	4UTB030223	氣壓缸	Cylinder	1
19	4CV58F0107	氣缸支架	Bracket	1
20	4CV58F0106	套筒	Knuckle	1
21	4CV58FA0102	電磁閥組	Electrical Controller Asm.	1
22	4UTB000305	節流閥	Speed Controller	2
23	2100000323	墊圈	Washer	2
24	90SW070	彈簧墊圈	Spring Washer	2
25	8MP06401211A	螺絲	Screw (UTB1-03-02)	2
26	K-100	真空送氣管	Venturi Tube	1
27	8WD45001900A	螺絲	Screw	6
28	4TC0010130	φ6空氣管	Air Tube (L=1000mm)	4
29	8MC03202006D	螺絲	Screw	2
30	4TC00103011	楔片座	Bracket	1
31	4CV58F0104	φ6空氣管	Air Tube (L=300mm)	2
32	4CV58F0105	支架	Bracket	1
33	8MM05321209A	螺絲	Screw (FT05-24)	1
34	8MA05320408A	螺帽	Nut (CT10-28)	1
35	8MA10800714A	螺帽	Nut (SH17-05)	1

* 必須配合直驅馬達使用 (型號: TD)

* These two devices must be used together with liner-motor (Model No: TD)