


BH003 盲縫導模 BLIND HEMMING

FOR(UH9013F/UHD9013F/UH9313/UHD9313/UHF9313/UHU9313)

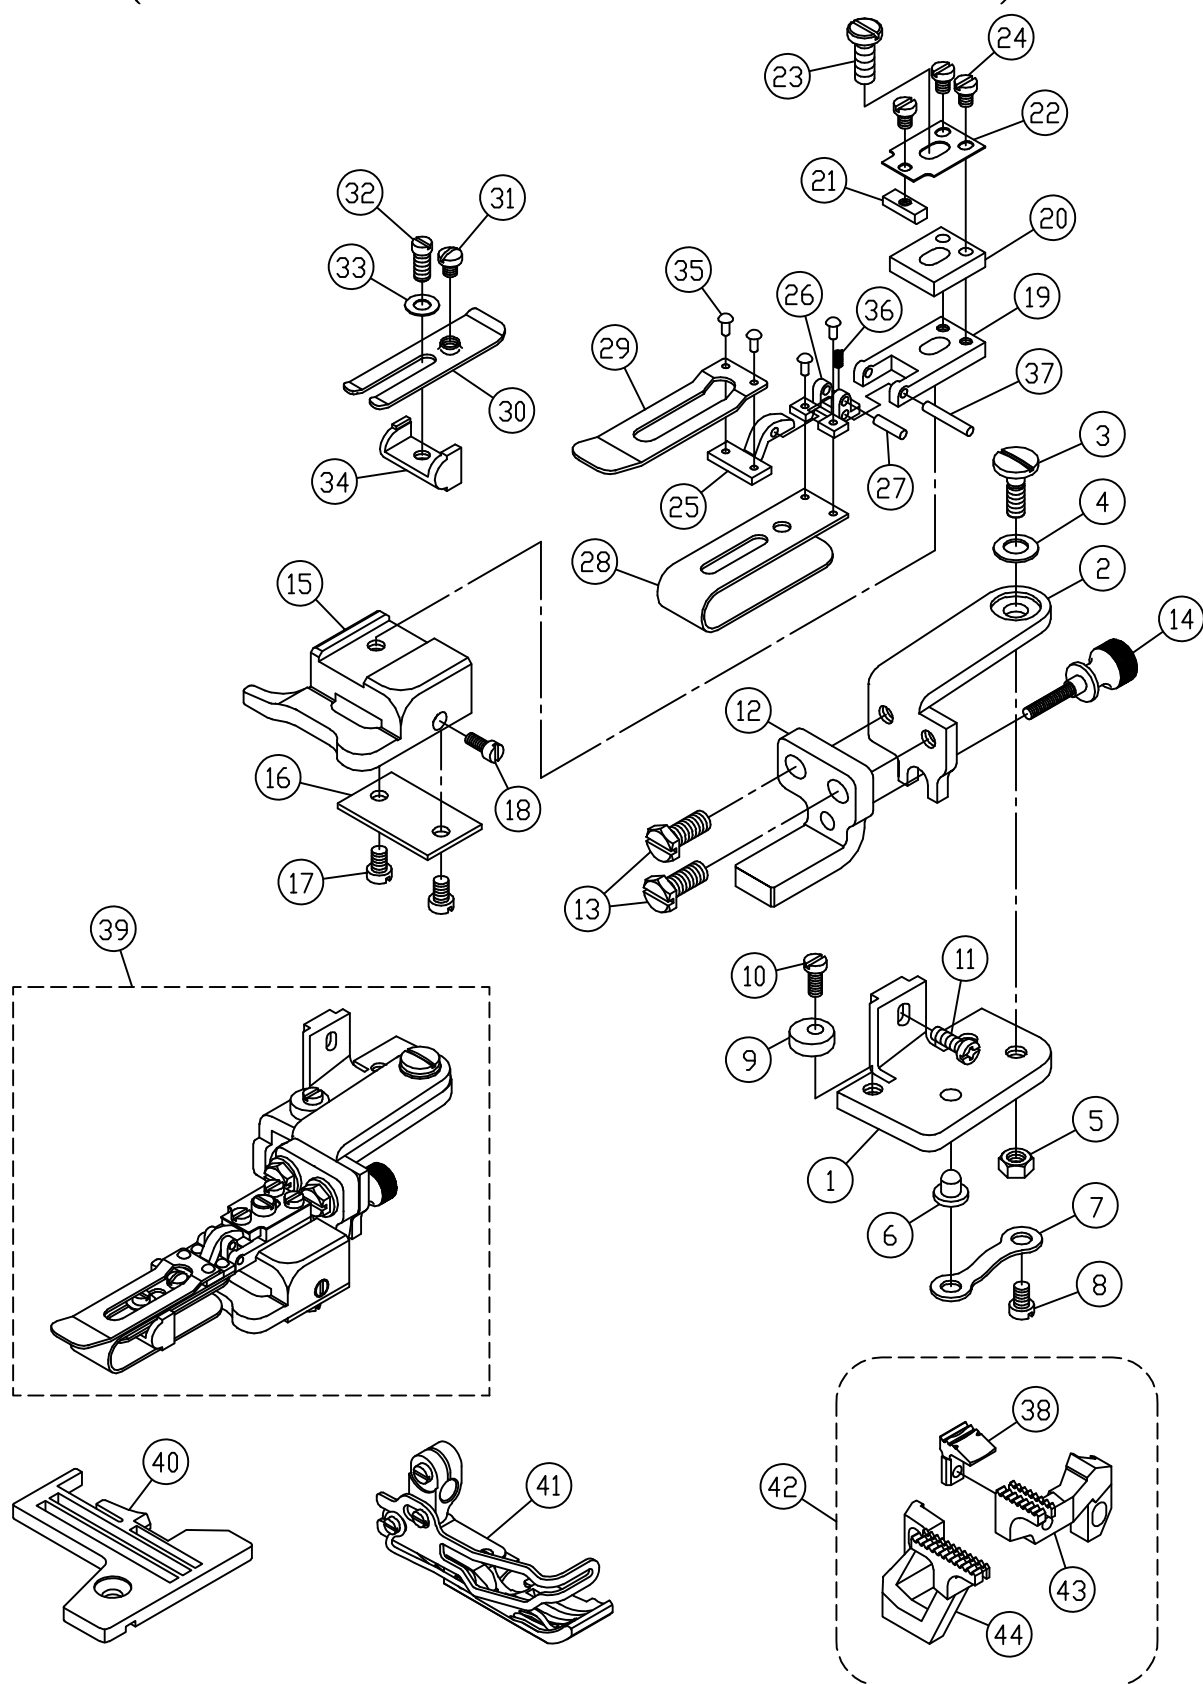

機型 Models	更換零件 Main Parts	針板 Needle Plate	壓腳組 Presser Foot Asm.	主送布齒 Main Feed Dog	差動送布齒 Differential Feed Dog	輔助送布齒 Auxiliary Feed Dog
UHU9313-032-L05		5213TP0032	5214PF4001	5213FD0032	5213DF0032	5213AF0243

BH003 盲縫導模 Blind Hemming

FOR (UH9013F/UHD9013F/UH9313/UHD9313/UHF9313/UHU9313)

序號	物料編號	名	稱	單位用量	
Ref. No.	Parts.No.	Description		Amt. Req.	
1	4BH0030101	承座	Bracket	1	
2	4BH0020102	活動臂	Arm	1	
3	8SC44401109E	樞銷螺栓	Screw	1	
4	4BH0020104	波形墊圈	Washer	1	
5	8SA44400307A	螺帽	Nut	1	
6	4BH0020106	定位銷	Pin	1	
7	4BH0020107	簧片	Spring	1	
8	8SC32440406A	螺絲	Screw	1	
9	4BH0020109	定位凸輪	Cam	1	
10	8SB32440705A	螺絲	Screw	1	
11	8MC04281207D	螺絲	Screw	1	
12	4BH0020112	導軌	Guide	1	
13	8SK44400907D	螺絲	Screw	2	
14	4BH0020114	調整螺樁	Stud	1	
15	4BH0030115	捲鈹舌	Glota Guide	1	
16	4BH0030116	托底板	Plate	1	
17	8SB32440505A	螺絲	Screw	2	
18	8SB24560504A	固定螺絲	Screw	1	
19	4BH0020119	固定座	Hing Seat	1	
20	4BH0020120	墊片	Spacer	1	
21	4BH0020121	鎖扣塊	Stopper	1	
22	4BH0020122	簧片	Spring	1	
23	8SC36401307D	螺絲	Screw	1	
24	8SB24560604B	螺絲	Screw	3	
25	4BH0020125	活頁座	Hook	1	
26	4BH0020126	活動座	Hing	1	
27	4BH0020127	樞銷	Pin	1	
28	4BH0020128	卷板	Folder	1	
29	4BH0020129	活頁	Lever	1	
*	30	4BH0020130	隔片	Spacer	1
*	31	8SB32440305A	螺絲	Screw	1
*	32	8SB32440704A	螺絲	Screw	1
*	33	4BH0020133	墊圈	Washer	1
*	34	4BH0020134	滑塊	Regulator	1
	35	4BH0020135	鉚釘	Rivet	4
	36	4BH0020136	彈簧	Spring	1
	37	4BH0020137	樞銷	Pin	1
	38	*****	輔助送布齒	Auxiliary Feed Dog	
**	39	4BH0030139	捲鈹組合	Folder Asm.	1
	40	*****	針板	Needle Plate	
	41	*****	壓腳組	Presser Foot Asm.	
	42	5213DG0032	送布齒組	Feed Dog Asm.	1
	43	*****	主送布齒	Main Feed Dog	
	44	*****	差動送布齒	Differential Feed Dog	

* 薄物用

** 整組套件

***** 詳細資料請參照左圖

***** See Left Page