


TR011 擴張滾輪組零件列表 PARTS LIST FOR TR011 ROLLER SET
 FOR (UH9303/UHD9303/UHF9303/UHU9303)
 FOR (UH9304/UHD9304/UHF9304/UHU9304)

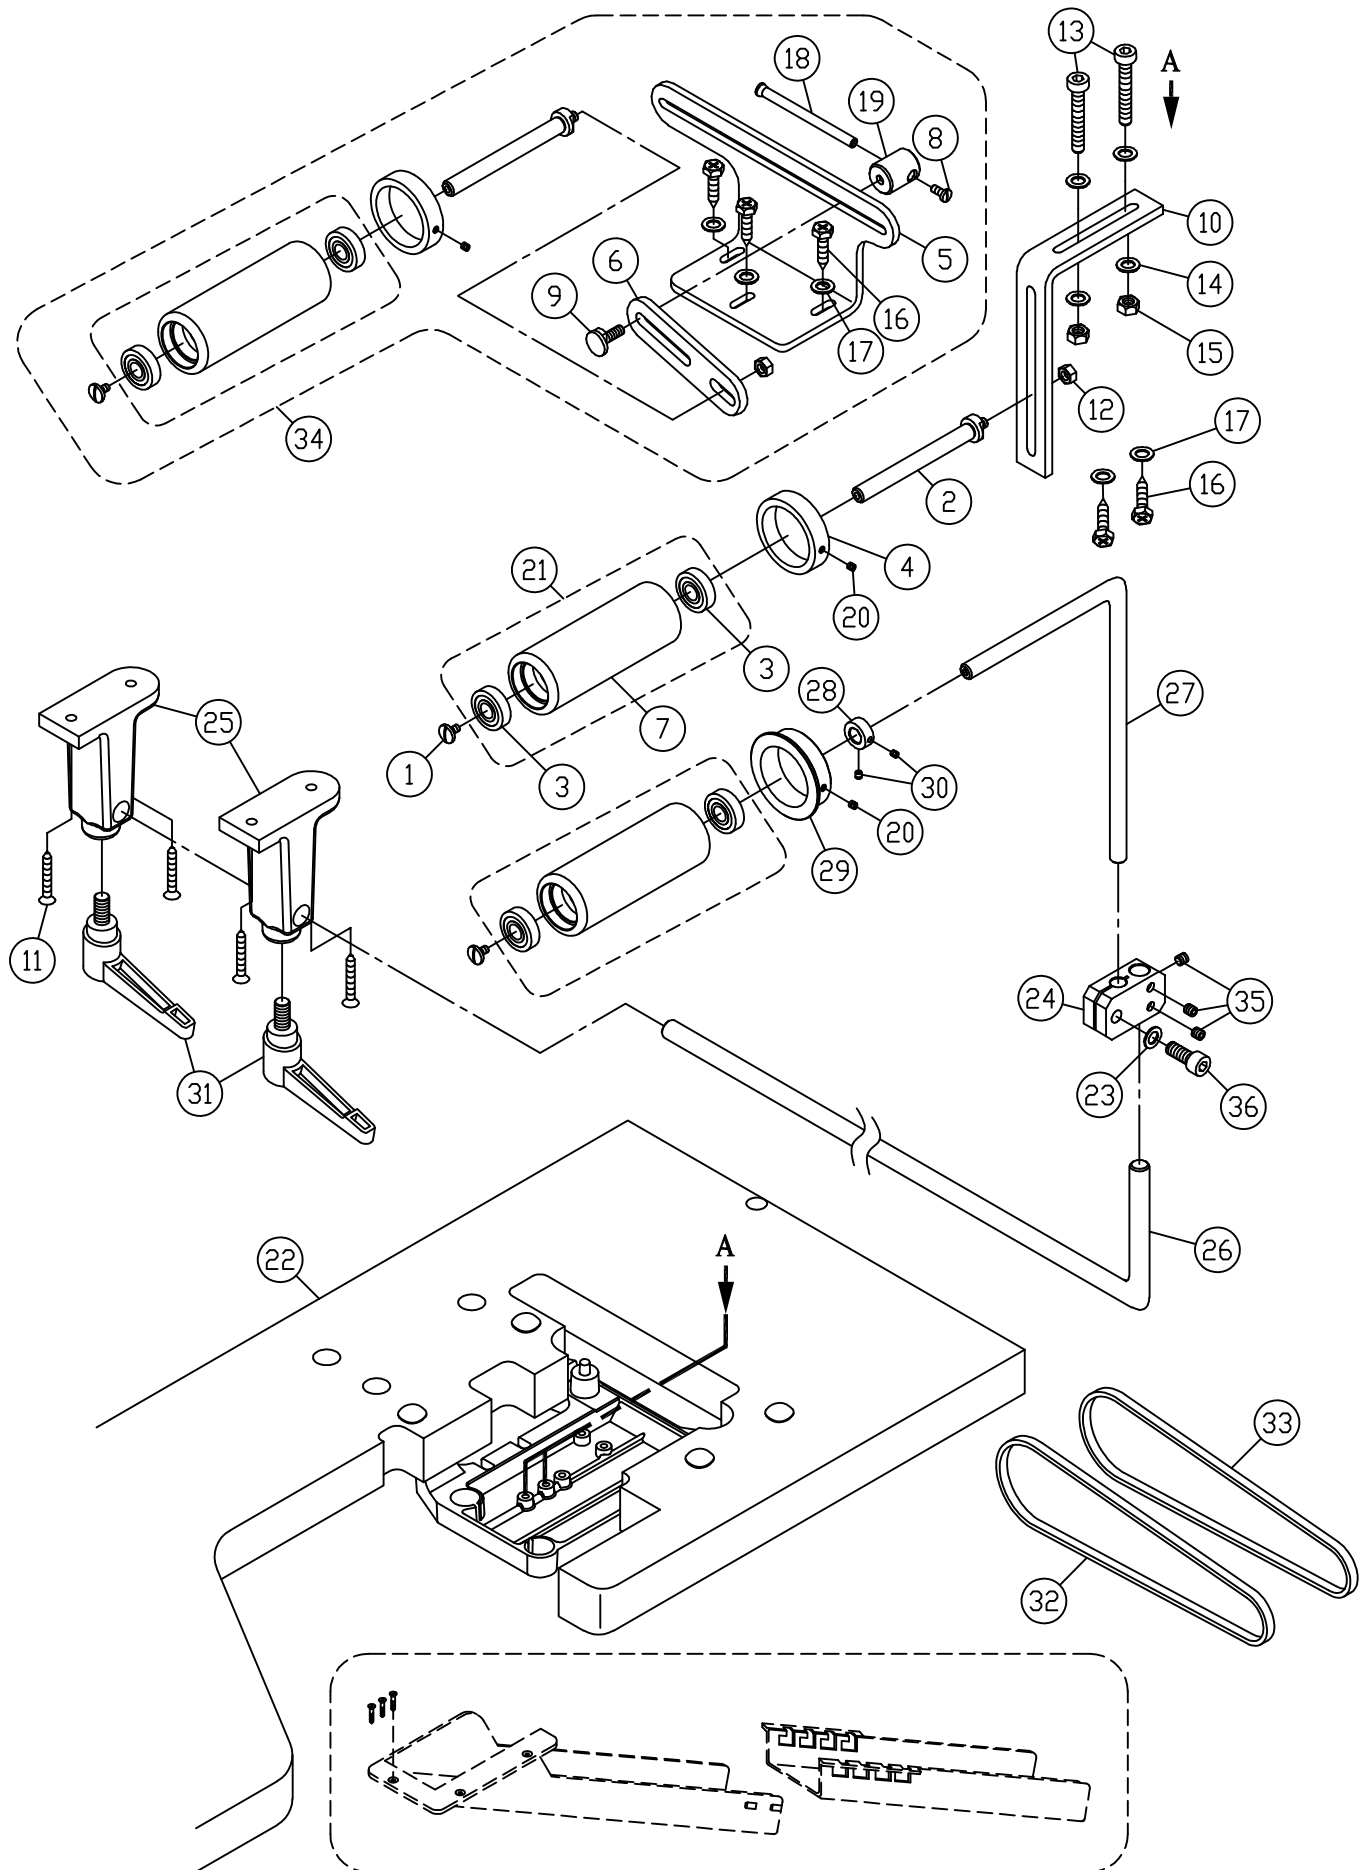

TR011 擴張滾輪組零件列表 Parts List For TR011 Roller Set

FOR (UH9303/UHD9303/UHF9303/UHU9303)

(UH9304/UHD9304/UHF9304/UHU9304)

序號	物料編號	名	稱	單位用量	
Ref. No.	Parts.No.	Description		Amt. Req.	
1	8SC44400812A	螺絲	Screw	3	
2	4TR00201021	軸	Shaft	2	
3	90BB1026082	滾珠軸承	Ball Bearing	6	
4	4TR0020104	鬆緊帶導模	Elastic Tape Guide	2	
5	4TR0020105	滾輪座	Roller Seat	1	
6	4TR0020106	滾輪臂	Roller Holder Arm	1	
7	4TR00201071	滾輪	Roller	3	
8	8SC44401008A	螺絲	Screw	1	
9	4TR0020119	螺樁	Stud	1	
10	4TR0020120	滾輪臂	Roller Holder Arm	1	
11	8WE37002400A	木螺絲	Wood Screw	4	
12	8MA06400510A	螺帽	Nut	2	
13	8MM05323509A	螺絲	Screw	2	
14	2120001240	墊圈	Washer	4	
15	8MA05320408A	螺帽	Nut	2	
16	8WK45002900C	木螺絲	Wood Screw	3	
17	2200000910	墊圈	Washer	3	
18	4TR0020128	柄	Handle	1	
19	4TR0020129	止動塊	Tension Roller Slider Stop	1	
20	8MH04280400A	螺絲	Screw	3	
21	4TR002A0130	滾輪組	Roller Asm.	3	
22	66814-3	U3車板半沉式開口	Table	1	
23	90PW080	墊圈	Washer	1	
24	4TR0020115	連接塊	Connecting Block	1	
25	4TR0110102	支架座	Holder Bracket Seat	2	
26	4TR0020111	支架	Holder Bracket	1	
27	4TR00201171	支架	Holder Bracket	1	
28	4TR0020125	定位環	Collar	1	
29	2270850418	鬆緊帶導模	Elastic Tape Guide	1	
30	8MH85240500A	螺絲	Screw	2	
31	4TR0020108	固定板手	Lock Lever	2	
*	32	4TR0110140	伺服馬達三角皮帶(36")	AC Servo Motor Belt	1
*	33	4TR0110141	離合器馬達三角皮帶(39")	Clutch Motor Belt	1
	34	4TR011A0105	擴張滾輪組	Roller Set	1
	35	8MN06400600A	螺絲	Screw	3
	36	8MM08502013A	螺絲	Screw	1

* 選配件 Option Device