


TR012 擴張滾輪組零件列表 PARTS LIST FOR TR012 ROLLER SET
 FOR (UH9303/UHD9303/UHF9303/UHU9303)
 FOR (UH9304/UHD9304/UHF9304/UHU9304)

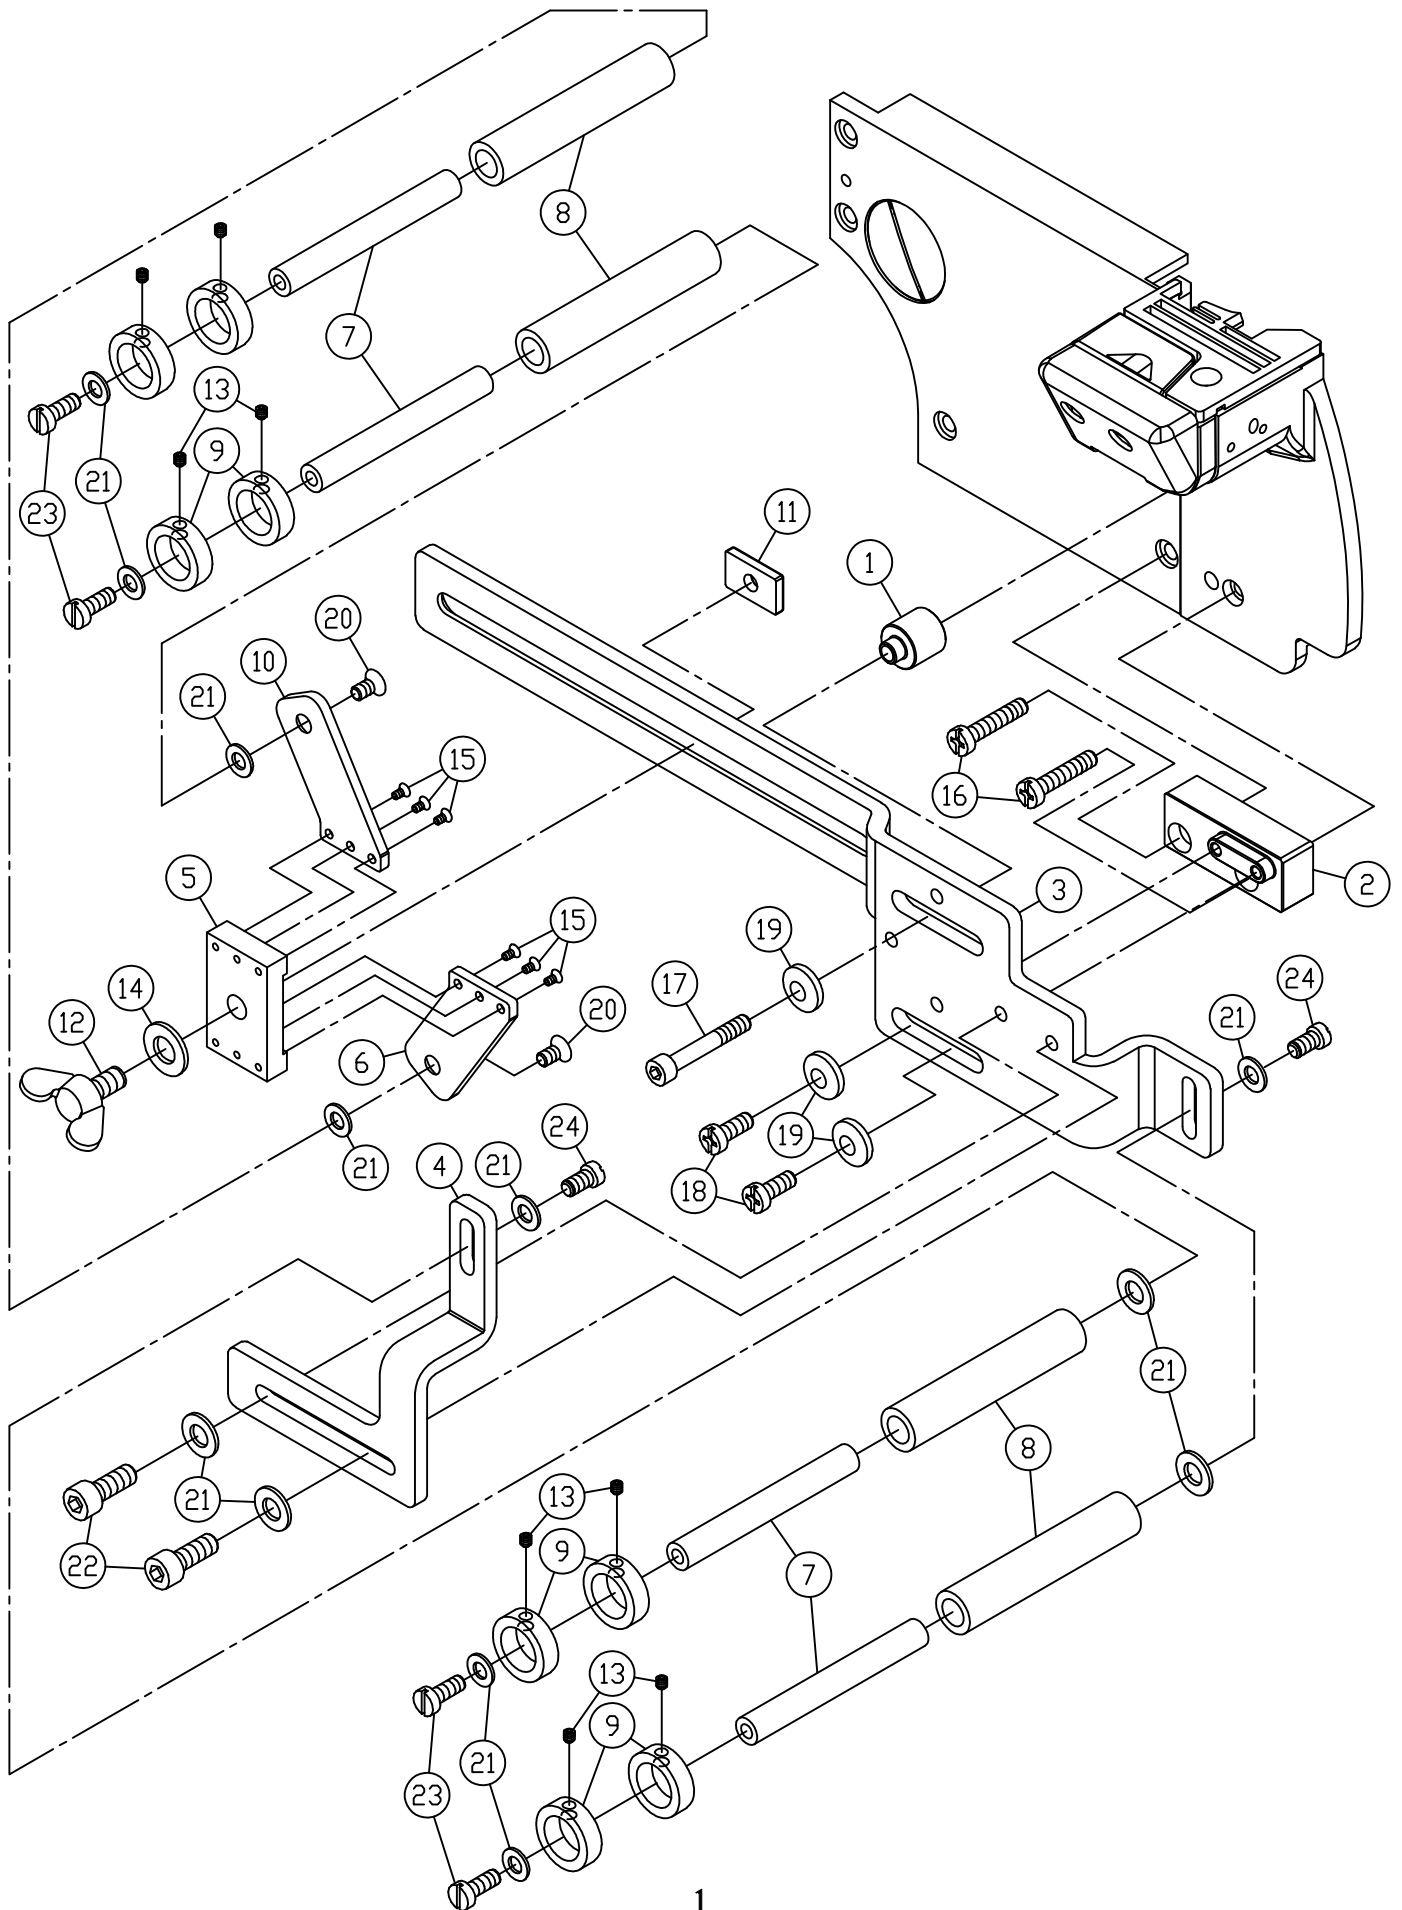

TR012 擴張滾輪組零件列表 Parts List For TR012 Roller Set**FOR (UH9303/UHD9303/UHF9303/UHU9303)****(UH9304/UHD9304/UHF9304/UHU9304)**

序號 Ref. No.	物料編號 Parts.No.	名 Description	稱	單位用量 Amt. Req.
1	4TR0120101	套筒	Collar	1
2	4TR0120102	定位塊	Setting Block	1
3	4TR0120103	滾輪座	Roller Seat	1
4	4TR0120104	前滾輪臂	Roller Holder Arm	1
5	4TR0120105	止動塊	Setting Block	1
6	4TR0120106	下滾輪臂	Roller Holder Arm	1
7	4TR0120107	軸	Shaft	4
8	4TR0120108	滾輪	Roller	4
9	4TR0120109	定位環	Collar	8
10	4TR0120110	上滾輪臂	Roller Holder Arm	1
11	4TR0120111	滑塊	Slider	1
12	4TR0120112	翼形螺絲	Screw	1
13	8MN03200300A	螺絲	Screw	8
14	2100000323	墊圈	Washer	1
15	8ME75180605A	螺絲	Screw	6
16	8MC04282007D	螺絲	Screw	2
17	8MM04283007B	螺絲	Screw	1
18	8MC04281007D	螺絲	Screw	2
19	2120000151	墊圈	Washer	3
20	8ME05321010A	螺絲	Screw	2
21	2120000527	平墊圈	Washer	12
22	8MM05321009A	螺絲	Screw	2
23	8MC05320809A	螺絲	Screw	4
24	8MC05321209D	螺絲	Screw	2