


TR017 擴張滾輪組零件列表 PARTS LIST FOR TR017 ROLLER SET
 FOR (UH9303/UHD9303/UHF9303/UHU9303)
 FOR (UH9304/UHD9304/UHF9304/UHU9304)

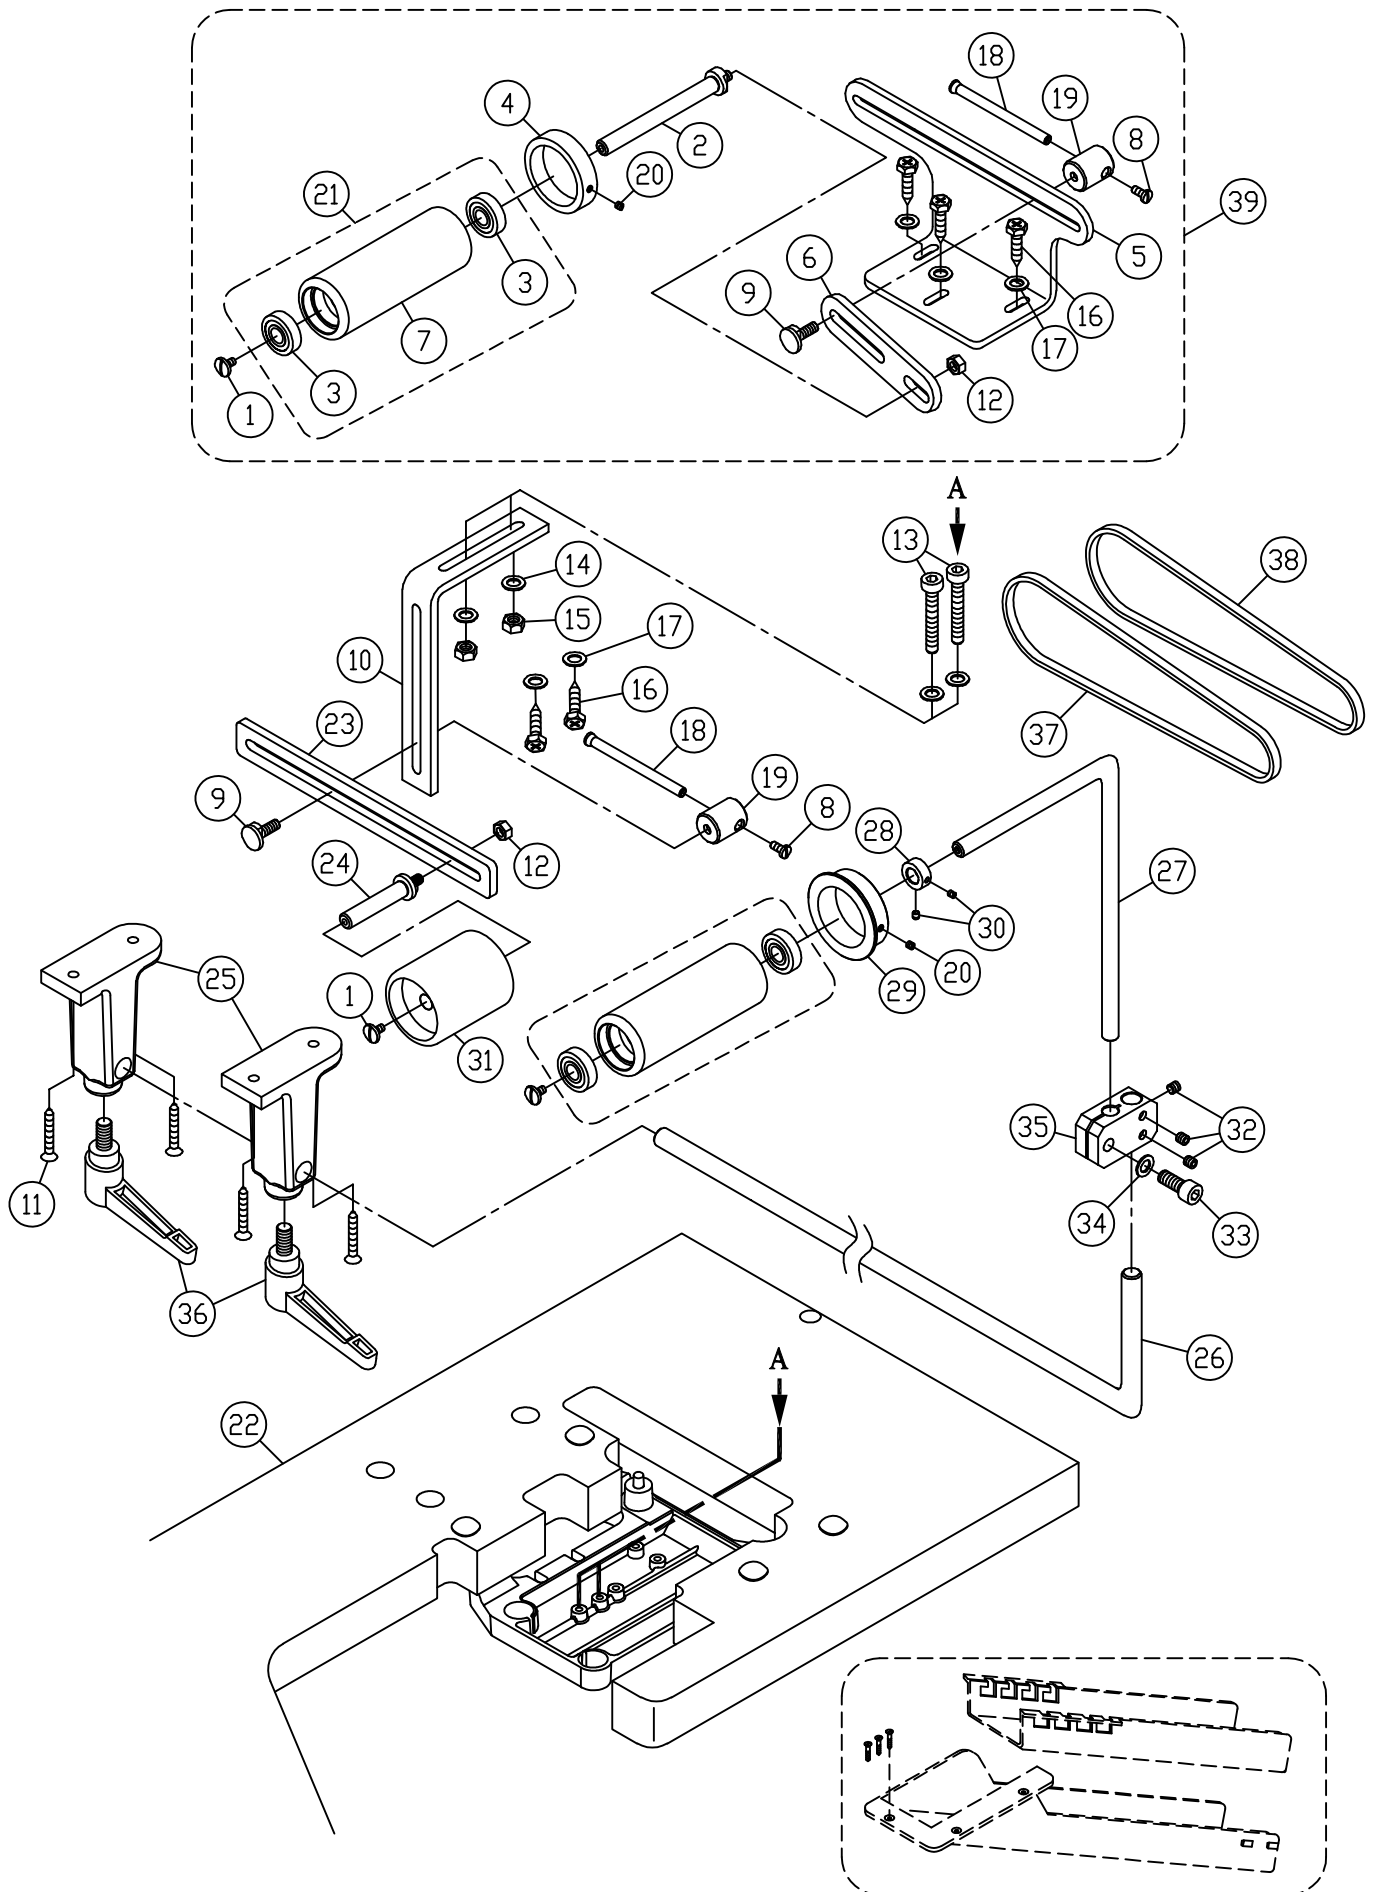

TR017 擴張滾輪組零件列表 Parts List For TR017 Roller Set

FOR (UH9303/UHD9303/UHF9303/UHU9303)

(UH9304/UHD9304/UHF9304/UHU9304)

序號 Ref. No.	物料編號 Parts.No.	名 Description	稱	單位用量 Amt. Req.
1	8SC44400812A	螺絲	Screw	3
2	4TR00201021	軸	Shaft	1
3	90BB1026082	滾珠軸承	Ball Bearing	4
4	4TR0020104	鬆緊帶導模	Elastic Tape Guide	1
5	4TR0020105	滾輪座	Roller Seat	1
6	4TR0020106	滾輪臂	Roller Holder Arm	1
7	4TR00201071	滾輪	Roller	2
8	8SC44401008A	螺絲	Screw	2
9	4TR0020119	螺樁	Stud	2
10	4TR0020120	滾輪臂	Roller Holder Arm	1
11	8WE37002400A	木螺絲	Wood Screw	4
12	8MA06400510A	螺帽	Nut	2
13	8MM05323509A	螺絲	Screw	2
14	2120001240	墊圈	Washer	4
15	8MA05320408A	螺帽	Nut	2
16	8WK45002900C	木螺絲	Wood Screw	5
17	2200000910	墊圈	Washer	5
18	4TR0020128	柄	Handle	2
19	4TR0020129	止動塊	Tension Roller Slider Stop	2
20	8MH04280400A	螺絲	Screw	2
21	4TR002A0130	滾輪組	Roller Asm.	2
22	66814-3	U3車板半沉式開口	Table	1
23	4TR0020121	滾輪臂	Roller Holder Arm	1
24	4TR0060123	軸	Shaft	1
25	4TR0110102	支架座	Holder Bracket Seat	2
26	4TR0020111	支架	Holder Bracket	1
27	4TR00201171	支架	Holder Bracket	1
28	4TR0020125	定位環	Collar	1
29	2270850418	鬆緊帶導模	Elastic Tape Guide	1
30	8MH85240500A	螺絲	Screw	2
31	2200850420	滾輪	Roller	1
32	8MN06400600A	螺絲	Screw	3
33	8MM08502013A	螺絲	Screw	1
34	90PW080	墊圈	Washer	1
35	4TR0020115	連接塊	Connecting Block	1
36	4TR0020108	固定板手	Lock Lever	2
*	37 4TR0110140	伺服馬達三角皮帶(36")	AC Servo Motor Belt	1
*	38 4TR0110141	離合器馬達三角皮帶(39")	Clutch Motor Belt	1
	39 4TR011A0105	擴張滾輪組	Roller Set	1

* 選配件 Option Device