


TR019 擴張滾輪組零件列表 PARTS LIST FOR TR019 ROLLER SET
 FOR (UH9303/UHD9303/UHF9303/UHU9303)
 FOR (UH9304/UHD9304/UHF9304/UHU9304)

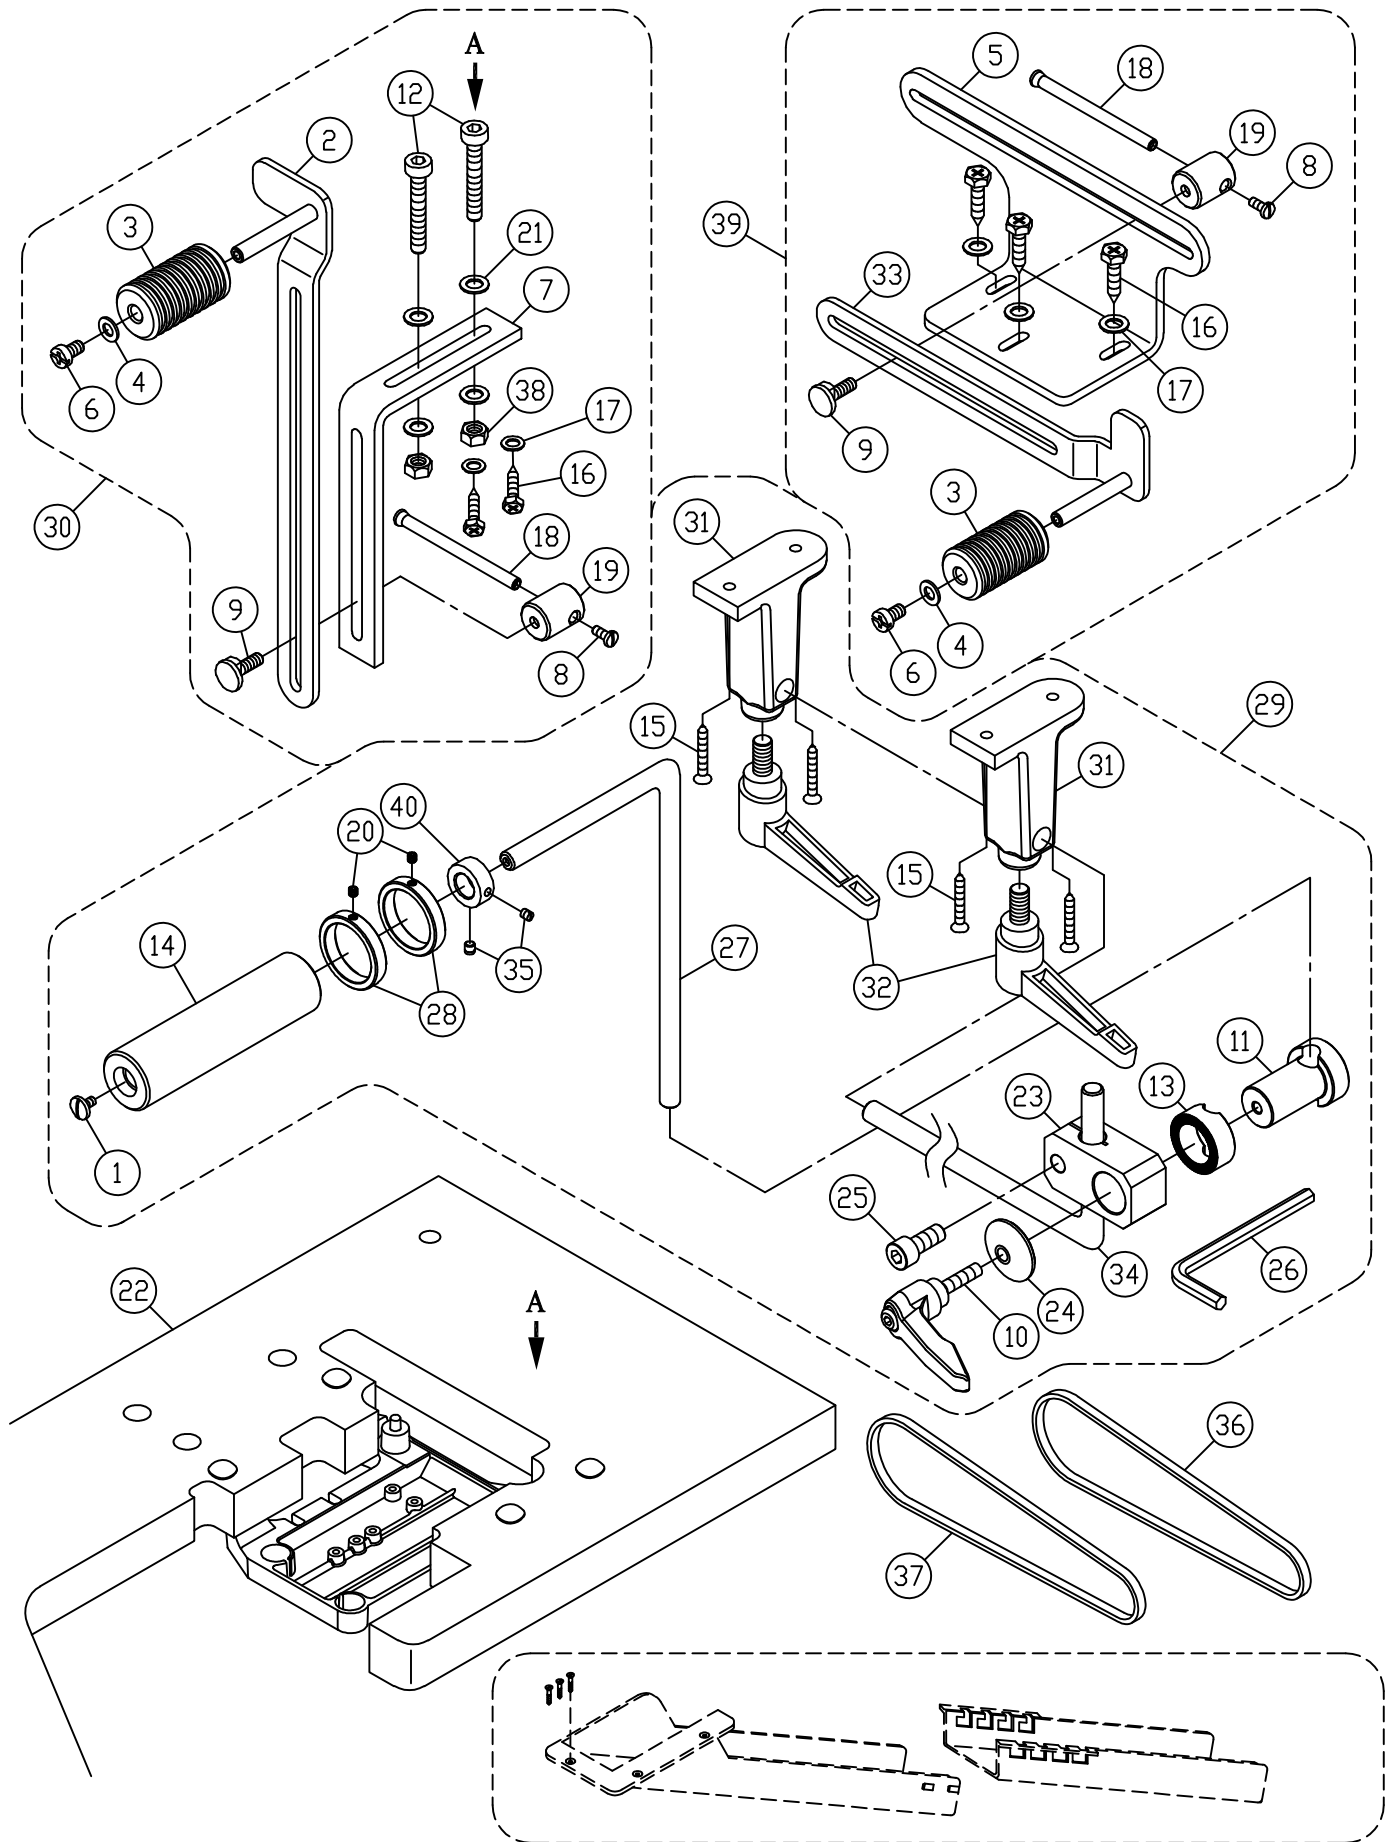

TR019 擴張滾輪組零件列表 Parts List For TR019 Roller Set

FOR (UH9303/UHD9303/UHF9303/UHU9303)

(UH9304/UHD9304/UHF9304/UHU9304)

序號	物料編號	名	稱	單位用量	
Ref. No.	Parts.No.	Description		Amt. Req.	
1	8SC44400812A	螺絲	Screw	1	
2	4TR0170101	滑軌	Guide	1	
3	4TR0170103	滾輪	Roller	2	
4	2130000360	平墊圈	Washer	2	
5	4TR0020105	滾輪座	Roller Seat	1	
6	8MC04280607D	螺絲	Screw	2	
7	4TR0020120	滾輪臂	Roller Holder Arm	1	
8	8SC44401008A	螺絲	Screw	2	
9	4TR0020119	螺樁	Stud	2	
10	4TR03A0112	固定扳手	Lock Lever	1	
11	4TR03A0113	連接塊	Connecting Block	1	
12	8MM05323509A	螺絲	Screw	2	
13	4TR03A0114	連接塊	Connecting Block	1	
14	4TR0190101	滾輪	Roller	1	
15	8WE37002400A	木螺絲	Wood Screw	4	
16	8WK45002900C	木螺絲	Wood Screw	5	
17	2200000910	墊圈	Washer	5	
18	4TR0020128	柄	Handle	2	
19	4TR0020129	止動塊	Tension Roller Slider Stop	2	
20	8MN03200300A	螺絲	Screw	2	
21	2120001240	墊圈	Washer	4	
22	66814-3	U3車板半沉式開口	Table	1	
23	4TR03A0115	連接塊	Connecting Block	1	
24	4TR03A0116	墊圈	Washer	1	
25	8MM08502013A	螺絲	Screw	1	
26	66641	六角扳手	Spanner 6MM	1	
27	4TR00201171	支架	Holder Bracket	1	
28	4TR0190102	定位環	Collar	2	
29	4TR019A0104	滾輪組	Roller Asm.	1	
30	4TR019A0102	滾輪組	Roller Asm.	1	
31	4TR0110102	支架座	Holder Bracket Seat	2	
32	4TR0020108	固定板手	Lock Lever	2	
33	4TR0170102	滑軌	Guide	1	
34	4TR0020111	支架	Holder Bracket	1	
35	8MH85240500A	螺絲	Screw	2	
*	36	4TR0110140	伺服馬達三角皮帶(36")	AC Servo Motor Belt	1
*	37	4TR0110141	離合器馬達三角皮帶(39")	Clutch Motor Belt	1
	38	8MA05320408A	螺帽	Nut	2
	39	4TR019A0103	滾輪組	Roller Asm.	1
	40	4TR0020125	定位環	Collar	1

* 選配件 Option Device